
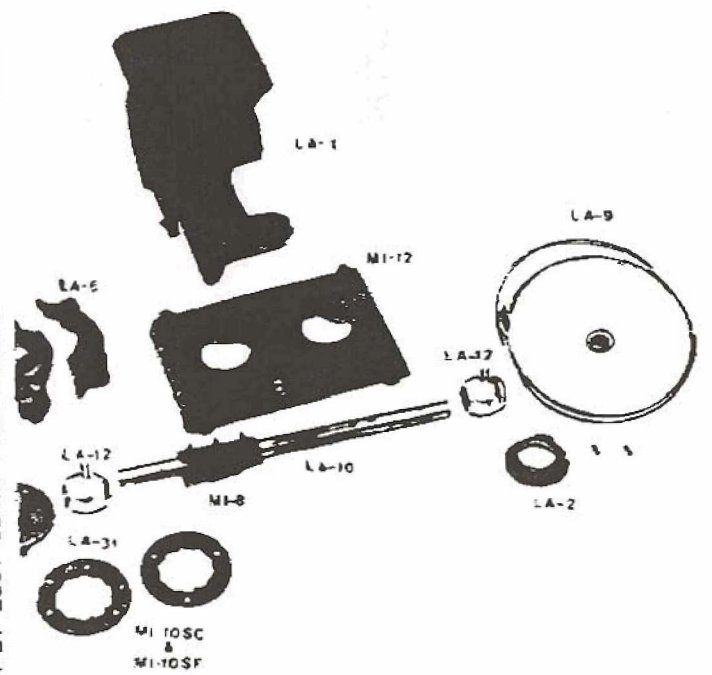


**PARTS**

<u>PART NUMBER</u>	<u>DESCRIPT</u>
LA-1	Main Cas
LA-2	Front Be
LA-3	Rear Bea
LA-4	Burr Cap
LA-5	Yoke
LA-6	Discharg
LA-7	Mill Pul
LA-8	Idler Pu
LA-9	V-pulley
LA-10	Steel Sh
LA-12	Bearings
MI-6	Adjustme
MI-7	Lock Han
MI-8	Feed Wor
MI-9	Revolvin
MI-XP	Pulley C
MI-12	Base
MI-10SF	Burrs -
MI-10SC	Burrs -
MI-X	Collar -
LA-22	Cap Scre
LA-23	Cap Scre
LA-24	Cap Scre
LA-25	Flat Hea
LA-26	Flat Hea
LA-27	Nut - 3/
LA-28	Nut - 1/
LA-29	Lock Was
LA-30	Lock Was
LA-31	Cotter P
LA-32	Steel Di
LA-33	Steel Ba

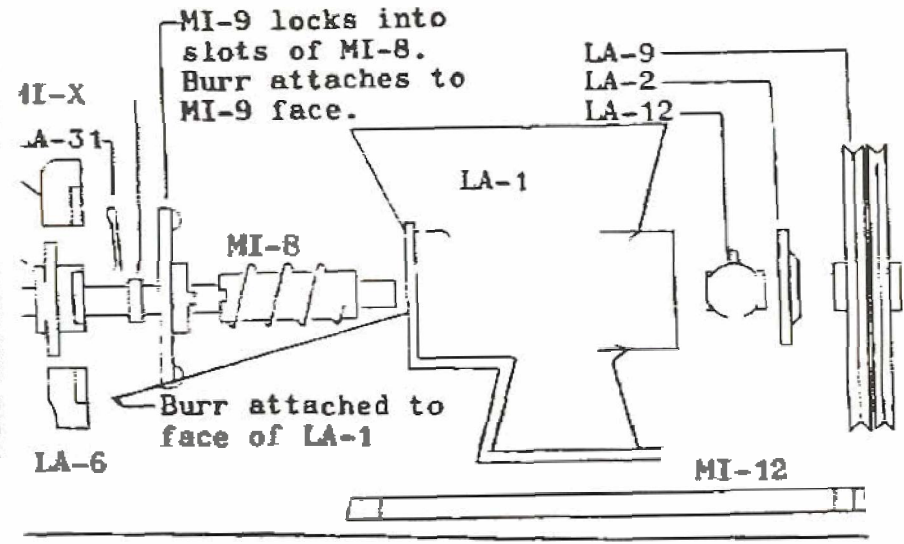

### PARTS LIST FOR LAMILPA POWER MILL

PART NUMBER	DESCRIPTION	REQ'D
LA-1	Main Casting	1
LA-2	Front Bearing Cap	1
LA-3	Rear Bearing Cap	1
LA-4	Burr Cap	1
LA-5	Yoke	1
LA-6	Discharge Cap	1
LA-7	Mill Pulley - 3-1/2" x 12"	1
LA-8	Idler Pulley - 3" x 12"	1
LA-9	V-pulley 12"	2
LA-10	Steel Shaft	1
LA-12	Bearings	2
MI-6	Adjustment Wheel	1
MI-7	Lock Handle	1
MI-8	Feed Worm	1
MI-9	Revolving Burr Holder	1
MI-XP	Pulley Collar - (For LA-3)	1
MI-12	Base	1
MI-10SF	Burrs - Fine Mashing	1 pr
MI-10SC	Burrs - Coarse Mashing	1 pr
MI-X	Collar - (For engaging MI-9)	1
LA-22	Cap Screw - 3/8" x 1-1/2"	6
LA-23	Cap Screw - 3/8" x 1-1/4"	3
LA-24	Cap Screw - 3/8" x 2"	6
LA-25	Flat Head Screw - 1/4" x 1-1/4"	2
LA-26	Flat Head Screw - 1/4" x 1"	4
LA-27	Nut - 3/8"	9
LA-28	Nut - 1/4"	6
LA-29	Lock Washer - 3/8" I.D.	6
LA-30	Lock Washer - 1/4" I.D.	6
LA-31	Cotter Pin - 3/16" x 1-1/2"	1
LA-32	Steel Disc - 1-3/16"	1
LA-33	Steel Ball - 1-3/16"	1